

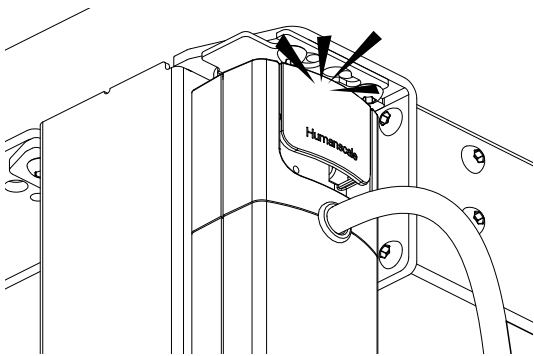
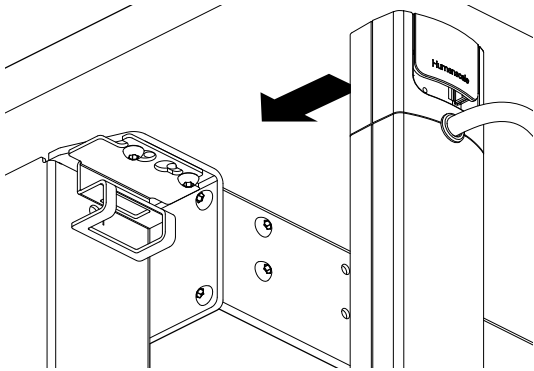
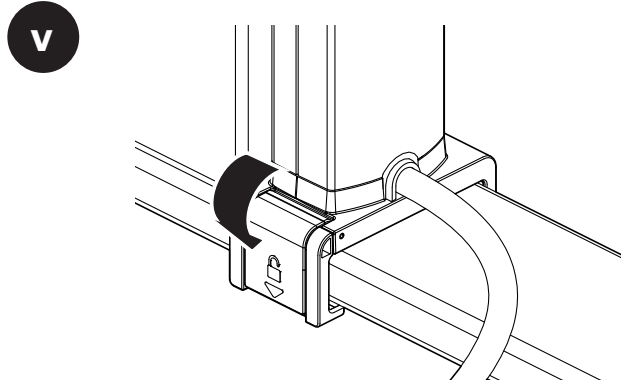
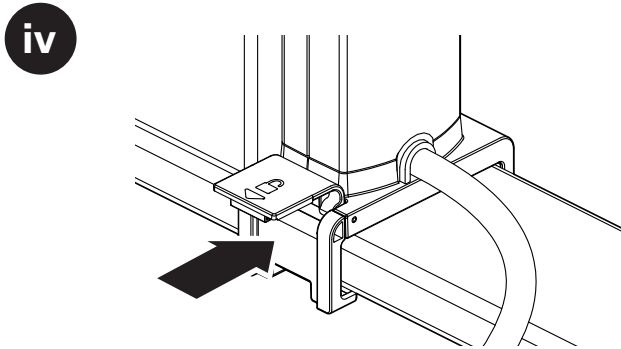
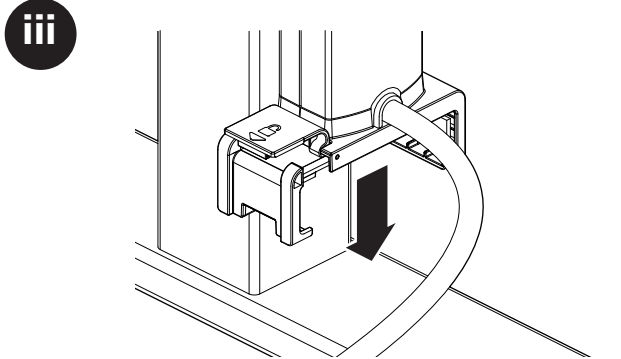


2. ATTACH NEATUP TO MOUNTING BRACKET

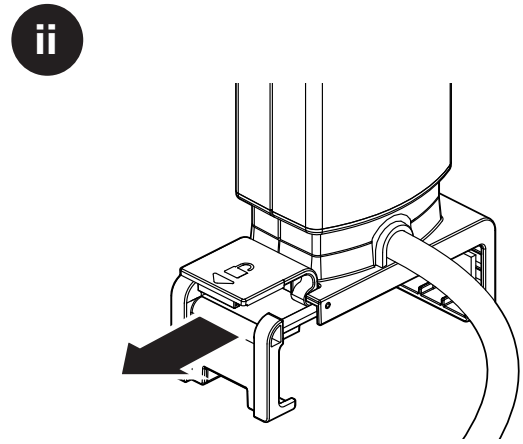


NOTE: Ensure the housing is securely locked in place.


3. ATTACH NEATUP TO TABLE'S FOOT

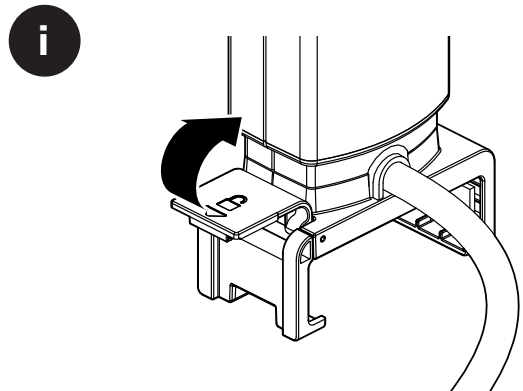


4. VERTICALLY ALIGN NEATUP WITH TABLE LEG

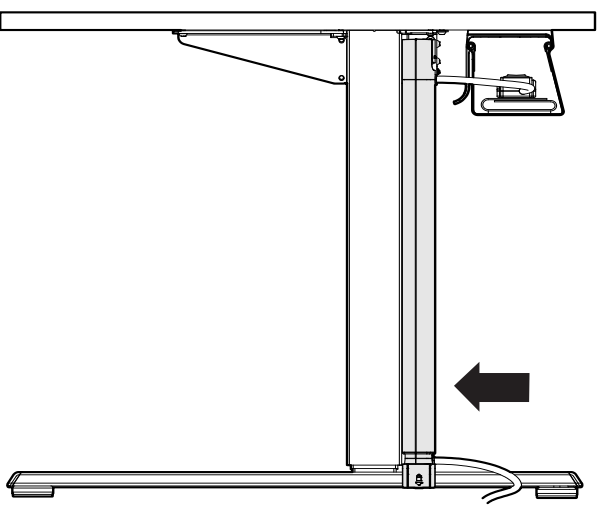

5. CONNECT ELECTRICAL COMPONENTS


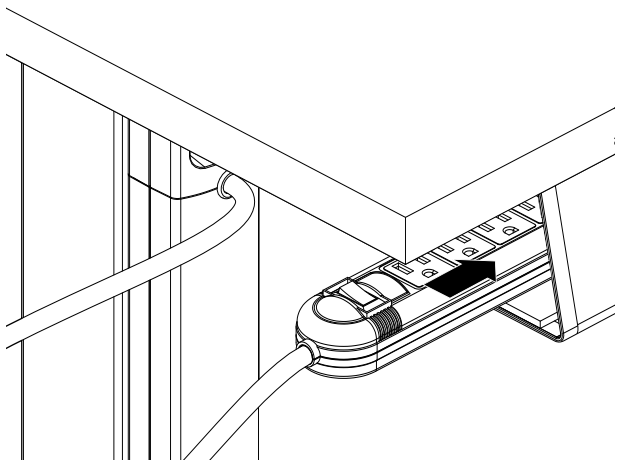


NOTE: If NeatTech is NOT installed, mount the power strip to the underside of the work surface using the mounting keyhole slots on the power strip housing.

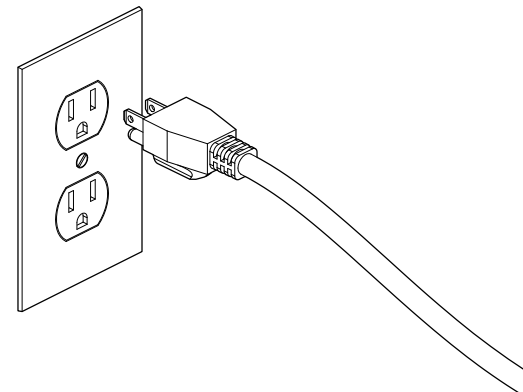



Connect plug to grounded power outlet.

6. TEST THE SYSTEM BY MOVING TABLE UP & DOWN

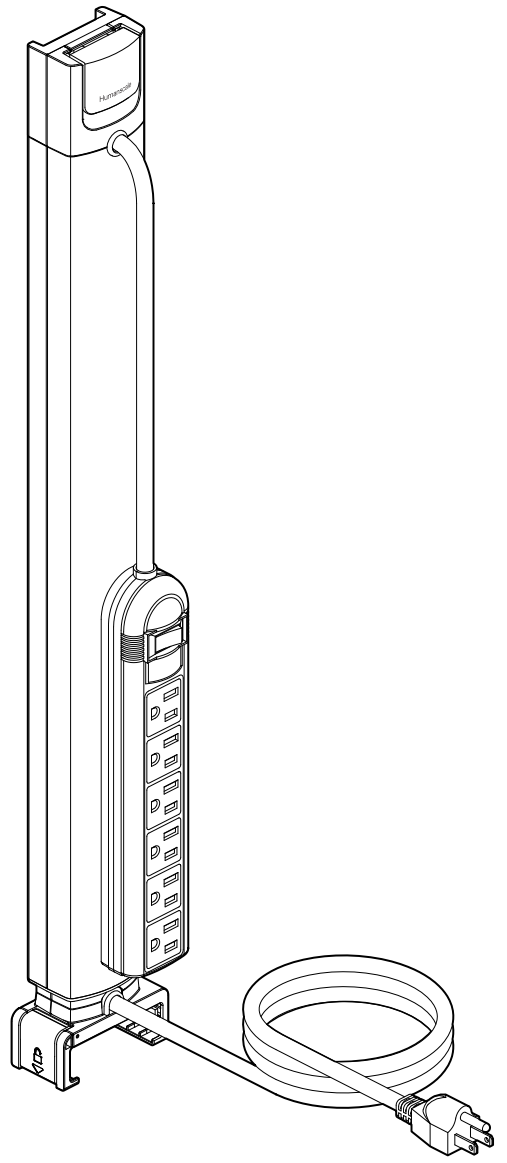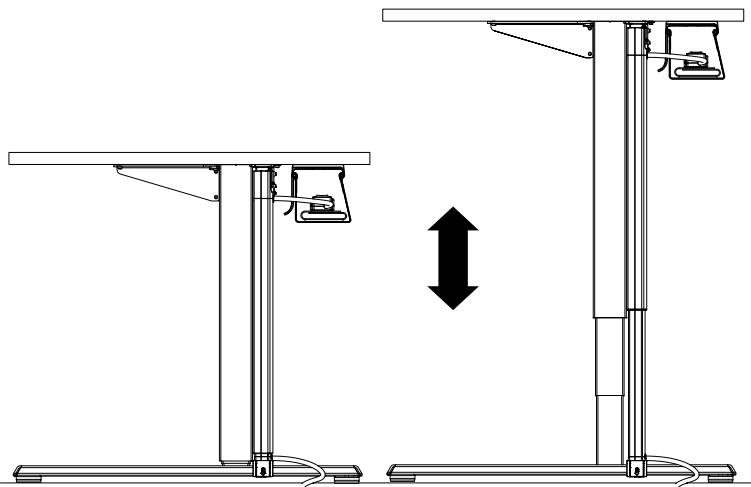


NeatUp™
Cable Management
Installation Manual

MOUNTING OPTIONS HARDWARE

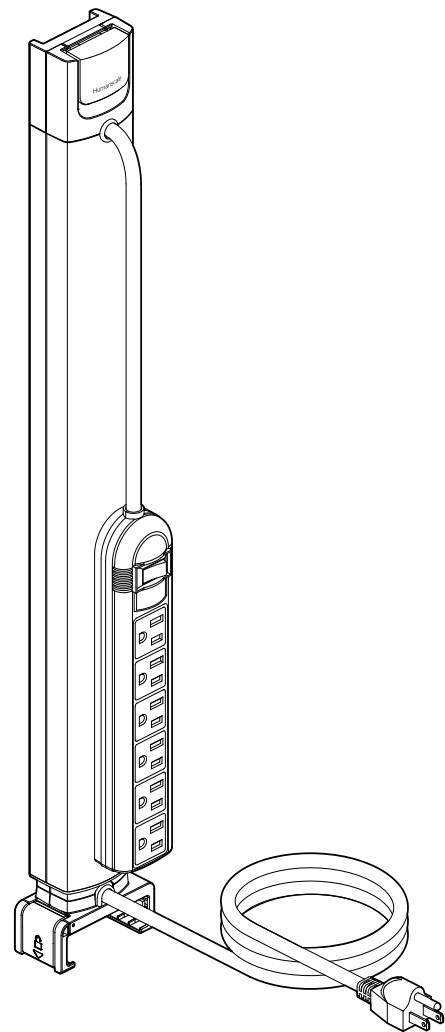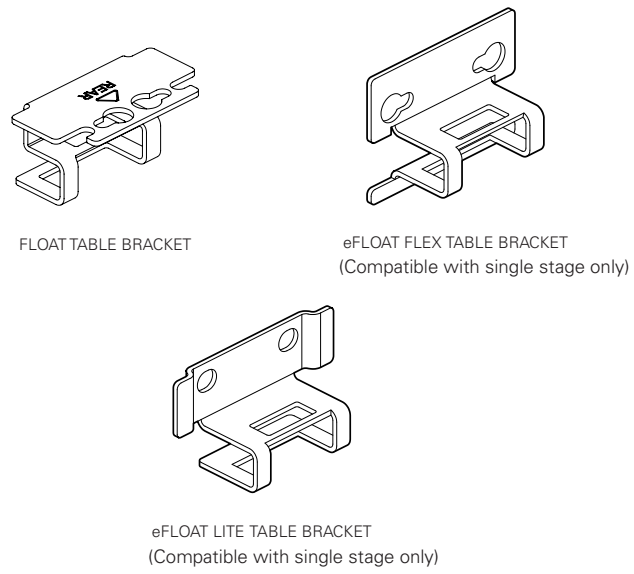


NOTE: For Access to User Guide, please navigate to:
www.humanscale.com/resources


1. BRACKET INSTALLATION | FLOAT TABLE

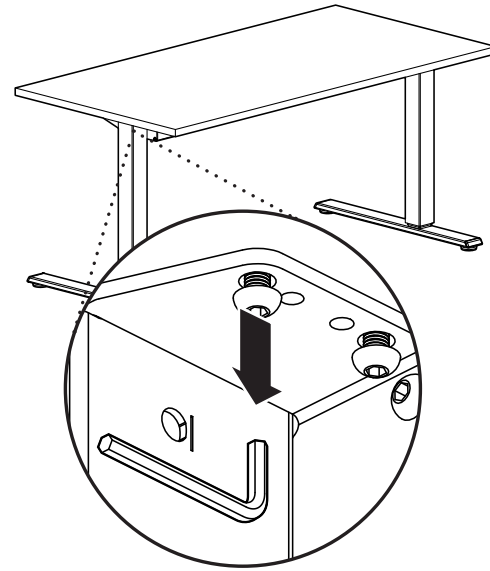

Partially loosen the two M6 screws, shown above (tool not included)
If using custom work surface, M6 screw will be replaced with Phillips head screw.
NOTE: The NeatUp Cable Management can be installed on the rear side of either table leg.

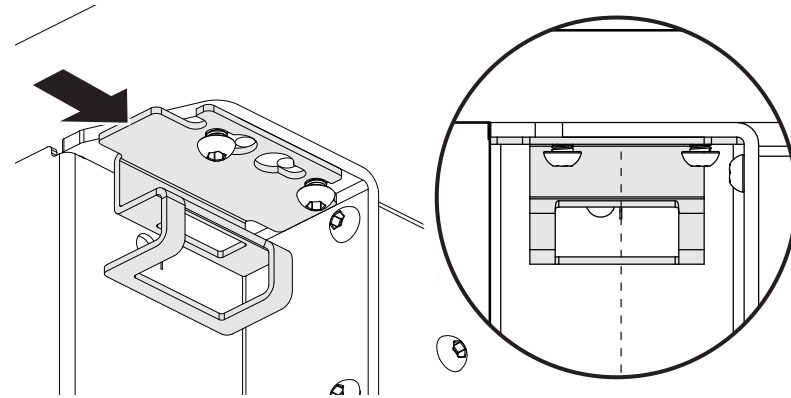


NOTE: Ensure the mounting bracket is centered on table's leg as shown above.

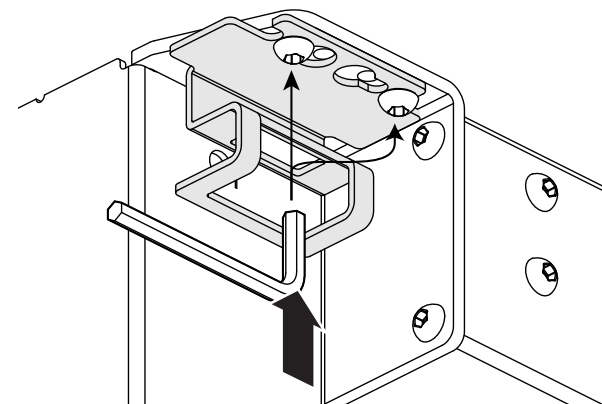


Fully tighten the two screws

1. BRACKET INSTALLATION | eFLOAT FLEX ELECTRIC TABLE

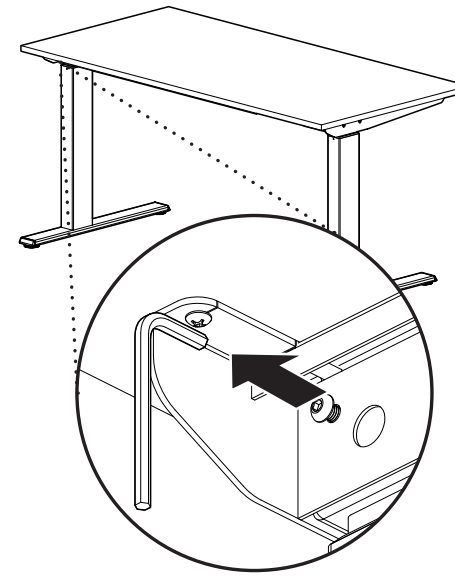


Partially loosen the M6 screw, shown above (tool not included)

NOTE: The NeatUp Cable Management can be installed on the rear side of either table leg.

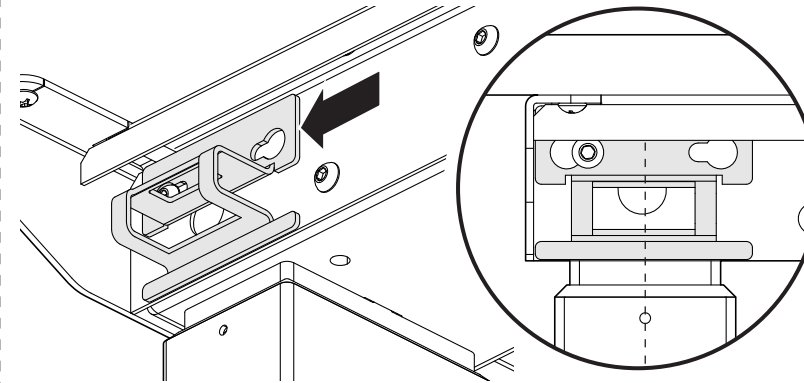


NOTE: Ensure the mounting bracket is centered on table's leg as shown above.

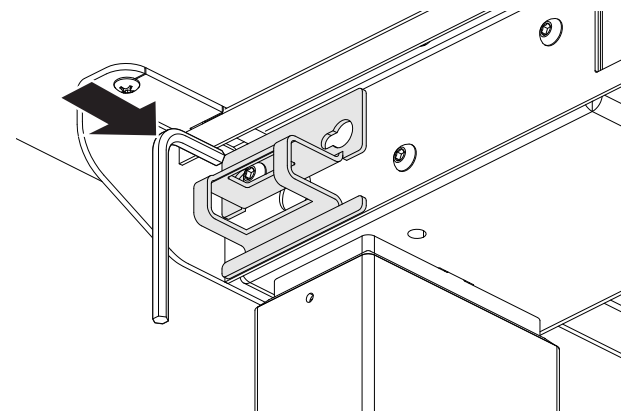


Fully tighten the screw

1. BRACKET INSTALLATION | eFLOAT LITE ELECTRIC TABLE

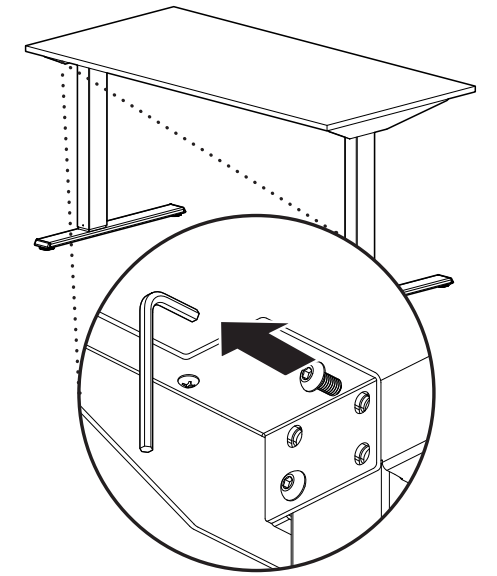


Remove the M8 screw, shown above (tool not included)

NOTE: The NeatUp Cable Management can be installed on the rear side of either table leg.

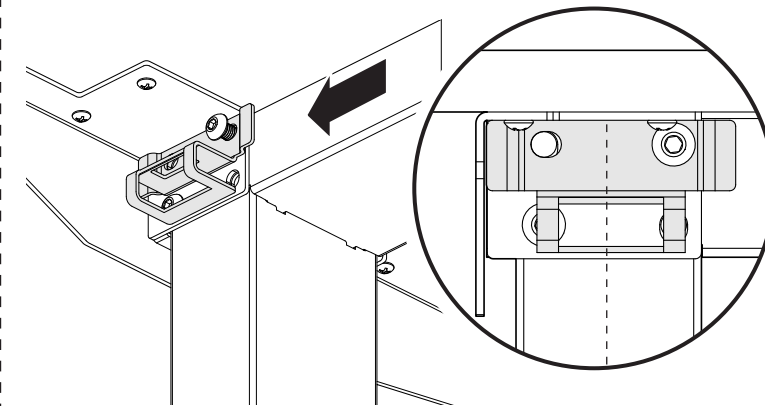

NOTE: Ensure the mounting bracket is centered on table's leg as shown above.

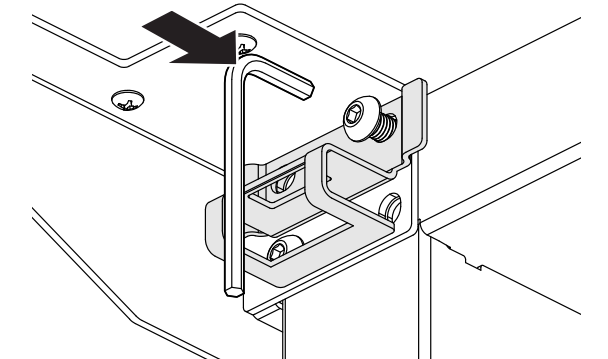

Fully tighten the screw